


Entroview Plus – User Guide

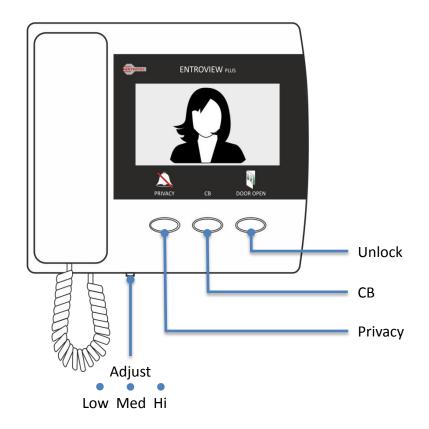

When someone calls

Lift the handset to answer an incoming call. The video monitor will display for the length of the call.

While on a call

To let the caller gain access, press Unlock.

Replace the handset to complete the call.

Silence a call

Press the **Privacy** button or **Adjust** the ringer volume with the slider.

Keep it quiet

If you do not wish to be disturbed, press **Privacy**. The button will illuminate and the ringer is silenced. Press the button again to turn the ringer back on.

CB button


Concierge Button / Call Back / Camera Switch Button if applicable.



Entroview Plus ECR134 - Installation Guide

	Cable Specificat	
ENTROVIE WPLUS	Cat 5e / Cat 6 / CW13	1308 6 Pair Minimum.
		for redundant cables. If this is a requirement then
	the installer must allo	low for this during installation.
		mmended for Concierge systems. 10 Pair CW1308 able runs exceeding 70 metres.
	recommended for ca	able runs exceeding 70 metres.
	Any unused cores to	b be tied to system 0v.
	gested Colour Code	Suggested Colour Code
•	Cat 5 / Cat 6	6 Pair CW1308
	hite/Blue DR	DR - White/Blue+Blue/White
	Blue VT	VT - White/Orange+Orange/White
To Sounders or Beacons Only	e/Orange 0V *Orange 87*	0V - White/Green+White/Brown
		BZ - White/Grey
9 : : :	Green	S2 - Green/White
		S1 - Brown/White
8 : Whit	te/Brown	DS - Grey/White
	Brown V+	V Red/Blue
	V+ CB*	Optional V+ - Blue/Red Door Bell
		• I
		• [†]

* NOTE: If DS, CB or X is required the internal ringer can be enabled and the BZ connection is not required, freeing up the Orange wire.

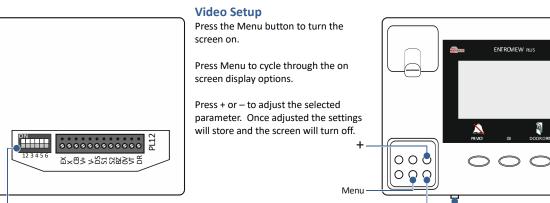

Option Switches

Option Switches

Switches **1**, **2** & **3** select the privacy function options. Privacy can be: disabled completely, set to latch on/off or set to time out after a preset time (see table: 0 = OFF 1 = ON).

Switch **4** is for 1 way systems and should be ON for normal use.

Switch 5 is not used.

Switch 6 selects video termination and should be ON for normal use.

Ringtones

To adjust the ringtone press and hold Privacy to start the ringer. Press Privacy to select the ringtone options and press Door Open to store.

3 Position Call

Tone Volume

Low Med Hi

